

Features

- ✓ Fast, portable, and easy to use imaging spectrometer
- ✓ Rapidly identifies and locates primary source terms
- ✓ Real-time spectroscopy, ID, and imaging
- ✓ Omnidirectional sensing and imaging
- ✓ Better than 1.1% FWHM energy resolution at 662 keV
- ✓ Energy range covers isotopes of interest up to 3 MeV
- ✓ Industry-leading imaging sensitivity using pixelated CZT technology
- ✓ Precision overlay of gamma-ray and optical images
- ✓ Images both point and distributed sources
- ✓ Ready to use in only 2 minutes
- ✓ Discrimination between background and sources of interest in less than 20 seconds
- ✓ Light weight and highly portable
- ✓ Integrated range finder
- ✓ Air/water tight for easy decontamination
- ✓ Dose-range gauge
- ✓ Automatic report generation
- ✓ Annual recalibration and software updates included

The H3D[®] H400 is the high-efficiency sibling of the H100. Perform measurements in a third of the time.




H400 is optimized for identification and localization of gamma-ray sources at nuclear power plants:

- ☐ Easy to use
- ☐ Highly portable
- ☐ Cost effective

Use the H400 for:

- ☐ Routine monitoring and maintenance
- ☐ Decommissioning operations
- ☐ Emergencies, incidents, and outages

Spectroscopic performance competitive with cryogenically cooled detectors and omnidirectional isotope-specific imaging... at under 8 lbs.

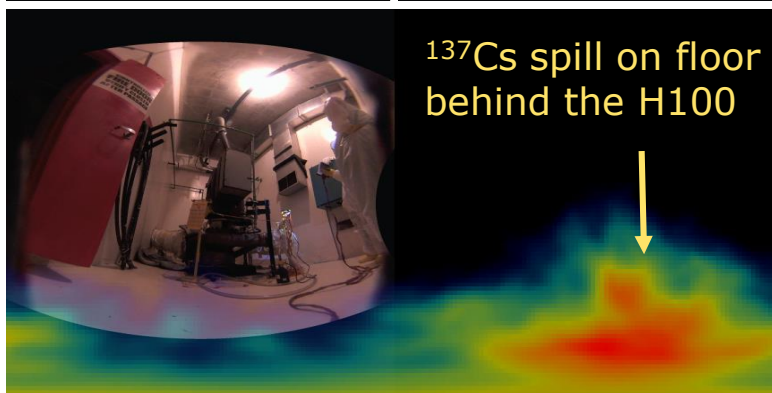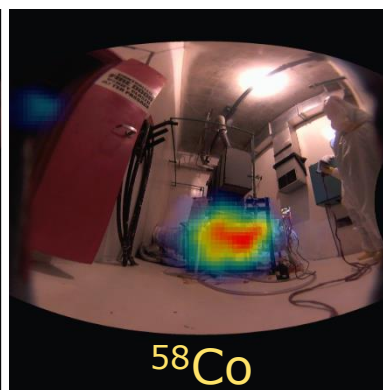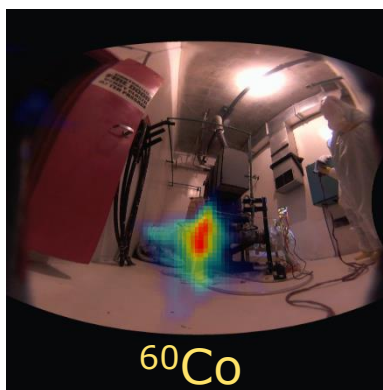


"All of our technology that we have—that I've worked with for 30 years—doesn't touch what this shows us."

- RPM, U.S. Nuclear Power Plant, describing the H100

10-minute isotope-specific images of an RHR pump room in a U.S. nuclear facility, using the H100


Low-Energy-Imaging Option (H420)

- Enable imaging to low energies using integrated coded aperture.
- Automated mask/anti-mask capability for improved signal to noise and cleaner images.
- Energy Range: 50 keV to 250 keV
- Radiation Field of View: $86^\circ \times 86^\circ$
- Angular Resolution: $\sim 5^\circ$ FWHM
- Additional weight: 0.8 lbs. (0.3 kg)

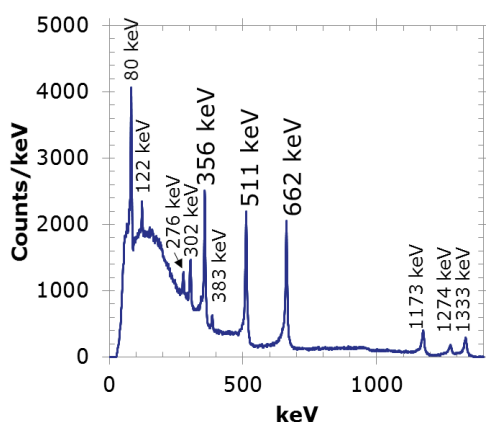

H400 Specifications

Dimensions:	9.6 in x 3.5 in x 7.25 in (24 cm x 9 cm x 18 cm)
...with Add-On Exoskeleton:	14.8 in x 4.7 in x 8.3 in (37.5 cm x 12 cm x 21 cm)
Weight:	7.8 lbs (3.5 kg)
	11.0 lbs (5.0 kg) with add-on exoskeleton
Battery Life:	>6 hours at 23° C (73° F)
	>3 hours at -20° C (-4° F) or 50° C (122° F)
Power Supply:	100-240 V, 47-63 Hz
Startup & Operating Temp.:	-20° C to 50° C (-4° F to 122° F)
Storage Temperature:	-20° C to 60° C (-4° F to 140° F)
Ingress Protection:	IP65 (IP67 with fan replacement)
Tripod Mounts:	1/4"-20 with reinforced thread
	3/8"-16 (with add-on exoskeleton only)
System Cooling:	Proprietary external heat sink and removable fan
User Service:	Removable fan cover; replaceable fan and fuse
Range Finder:	Integrated Class 2 laser; 635 nm; <1 mW
Energy Resolution:	$\leq 1.1\%$ FWHM at 662 keV
Optical Field of View:	>162° horizontal, >122° vertical
Optical Registration:	$\pm 2^\circ$ to radiation image
Radiation Field of View:	4 π (360°) omnidirectional
Angular Precision:	$\pm 1^\circ$ source localization for all 4 π (real time)
Angular Resolution:	$\sim 30^\circ$ FWHM for all 4 π (real time)
	$\sim 20^\circ$ FWHM for all 4 π (post processing)
Sensitivity:	Detects ^{137}Cs producing $\sim 3 \mu\text{R/hr}$ in <16 s (spectroscopy)
	Localize point source of ^{137}Cs producing $\sim 3 \mu\text{R/hr}$ in <90 s
Energy Range:	50 keV to 3 MeV (spectroscopy)
	250 keV to 3 MeV (imaging)
Crystal Volume:	>19 cm ³ CZT (CdZnTe)
Count-Rate Limit:	0.5 rem/hr (5 mSv/hr) bare- ^{137}Cs equivalent
Isotope Library:	Select from 3573 ENDF isotopes & user defined; unlimited
Startup Time:	2 min
Display:	7" 1280x800 HD tablet (mountable to back cover)
Tablet Communication:	Peer-to-peer Wifi or Bluetooth, or wired connection
Other Communication:	Ethernet RJ45 port; TCP/IP
Views:	Spectrum, gamma image, optical image, composite image
Data Storage:	Removable USB (16 GB) included
Warranty:	2 years (includes annual recalibration and software updates)
Includes:	Visualizer 2.3 software for advanced post processing
	Tablet-mounting bracket
	Power/accessory cables, stylus, and tablet
	Pelican™ Storm iM2600 Case
Optional Add-On:	Exoskeleton for drop protection

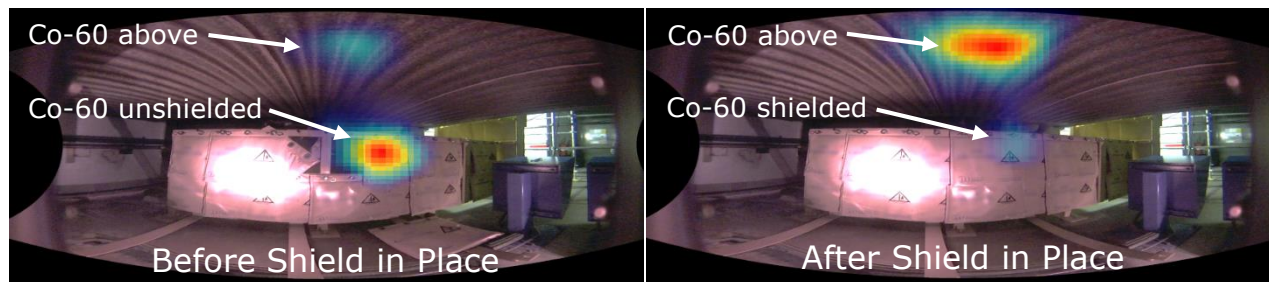

90-s measurements; Shield Verification; Using the H100



H3D®, Inc. • 812 Avis Drive • Ann Arbor, MI 48108 • USA
Tel +1 734-661-6416 • sales@h3dgamma.com • www.h3dgamma.com

© 2017-2018 H3D, Inc. All Rights Reserved. H400 and related systems patent protected by:
U.S. Pat No. 7,411,197 & U.S. Pat No. 7,692,155 under license from the University of Michigan.

Specifications, descriptions and images contained in this document were in effect at time of publication. H3D, Inc. reserves the right to change specifications or discontinue products without notice or obligation. All names, logos, and products herein are trademarks of their respective companies.